



Materials:

- **Clock Designs from the any of our Clock Design Packs:** to find these designs go to our website www.starbirdstockdesigns.com and type in clocks in the search window
- **Fabric**
- **10/70 sharp needle or 11 sharp or smaller**
- **Spray Adhesive**
- **Cutaway backing**
- **Screw driver**
- **Scissors**
- **Double sided tape**

Design used in this project:

Floral Vine & Butterfly Clock 8" CD022311TC

Step 1:

Choose the correct design size by measuring the face of your clock.




Step 2:

For this step you need spray adhesive, the fabric and 2 pieces of cut away fabric.

Using your spray adhesive, spray the top piece of backing and place the other piece of backing on top of it. Spray the top of this backing and place the fabric down so the top of the fabric is facing up.

Step 3:

Using a screw driver remove the back of the clock.

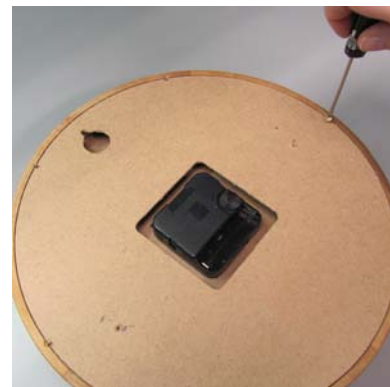

Step 4:

Gently remove the arms on the front of the clock.




Step 5:

Using a small very sharp scissors click out the fabric in the center hole of the clock.



Step 6:

Place the fabric face up on the clock, then turn it over and draw a line around the clock with a fabric marker. Then cut along the line you have just drawn.

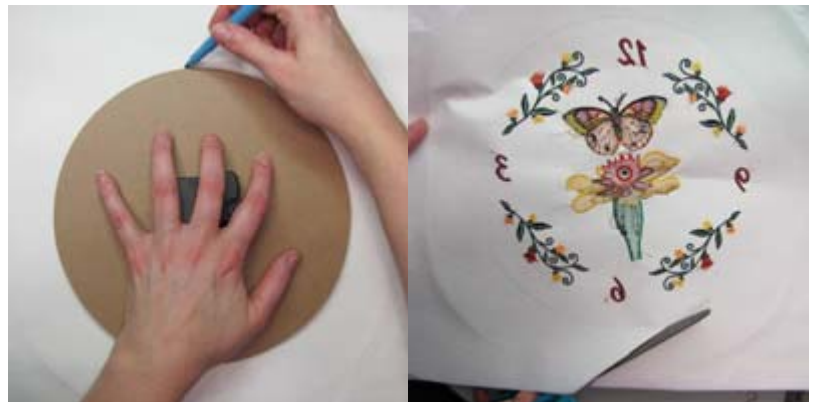


Step 7:

Now place the double sided tape on the face of the clock. Then center the embroidered fabric on your clock face and press it down.



Step 8:

Reassemble the clock and add a battery.

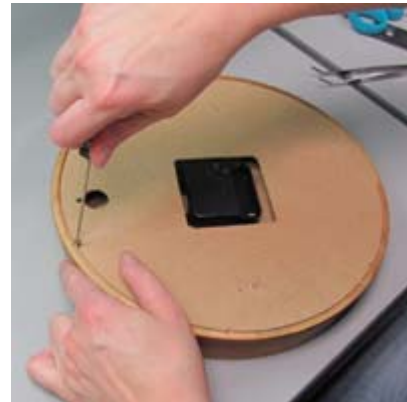

Step 9:

Enjoy your completed clock.



Thank you for your purchase.